



**Middlewich Wharf, Canal Terrace, Middlewich, CW10 9BD**

**0330 043 0547**

**[info@floating-holidays.co.uk](mailto:info@floating-holidays.co.uk)**

## **Boat Manual**

**Boat Name**

# **GOLDEN PRINCESS**

# Contents

- Welcome Aboard**..... 5
- Boat Specification:**..... 6
  - Boat Details** ..... 6
  - Systems**..... 6
  - Boat layout** ..... 7
- Basic boat operations**..... 8
  - Starting & stopping the engine**..... 8
  - Morse , tiller & tiller arc**..... 8
  - Heating domestic water** ..... 9
  - Central Heating** ..... 9
  - Cooker & hob** ..... 9
  - Microwave**..... 10
  - 12v power circuit** ..... 10
  - 240v Mains power circuit** ..... 10
  - Refilling with water**..... 10
  - Shower** ..... 10
  - Toilet**..... 11
  - Running out of LPG gas** ..... 11
  - Ventilation** ..... 11
  - Daily maintenance checks / tasks** ..... 11
  - Troubleshooting tips**..... 12
    - Is the toilet tank full?** ..... 12
    - The water pump keeps making a noise!**..... 12
    - No central heating**..... 12
    - The engine has stalled / the boat won't move**..... 12
- Boating Rules**..... 12
- Emergencies & safety equipment**..... 13
  - Safety equipment**..... 13
  - Shut off valves and isolation switches**..... 14
  - Emergency procedures** ..... 14
    - Man Overboard** ..... 15

LPG Gas Escape ..... 15

Lock Emergency ..... 16


Propeller Fouled ..... 16

Incident & Accident Reporting ..... 17

Damage, Breakdown or Repair ..... 18

Appendix ..... 19

Landlord Gas Safety Certificate ..... 19



### Liquefied Petroleum Gas Appliance Safety Record

installation Record of Works carried out in accordance with the Gas Safe(Installation and Use) Regulations and the Gas Industry Unsafe Situations Procedure  
internal inspection of flues (integrity, construction and lining) has been carried out.

Engineers Details				Installation Details			
Name	Stephen J Williams			Installation	NB Golden Princess		
Address	IWABSS Limited, NB Melody, Midway Marina, Wardle lane, Nantwich			Address	Floating-Holidays, Floating-Holidays, Middlewich Top Wharf, Canal Terrace, Middlewich, Cheshire.		
Gas Safe Reg. No.	591109	Email:		Telephone No			
Telephone No	07814-530679	<a href="mailto:Steve@iwabsslimited.co.uk">Steve@iwabsslimited.co.uk</a>		Telephone No			

Appliance Details					Inspection Details							
	Location	Appliance Type	Make	Model	CO2 Reading	CO Reading	Flue Type (D/R/S/U/P)	Appliance Inspected (Y/N/N/A)	Combustion Analysis Reading	Operating Pressure (mBar)	Landlord Appliance (Y/N/N/A)	Heat Input (KW)
1	Galley	Cooker	Thetford	931	N/A	N/A	UF	Y	N/A	37	Yes	5.8
2	Galley	Cooker	Thetford	Midi prima III	N/A	N/A	UF	Y	N/A	37	Yes	3.8
3												
4												
5												


Faults / Notes	Remedial Work Taken
1	
2	
3	
4	
5	
6	

System Air Test	No
Gas Tightness Test	Yes
Installed to 10239	Yes
Appliances to Manuf Inst?	Yes
Smoke / CO Alarm?	Yes


System Air Test Pressure	N/A	mBar
Reg. Lock Up Pressure	36	mBar
Reg Operating Pressure	38	mBar
Hose(s) Check	Ok	
ECV Check	N/A	

Signatures

Report Issued by

Name: Stephen Williams      Signed: 

Report Received By

Name:       Signed: 

..... 20

Navigation Authority License ..... 21

Vessel Insurance ..... 23



**Accident / Incident Reporting Form** ..... 25  
**Boaters Handbook** ..... 27

## Welcome Aboard

### Dear Guests

Thank you for choosing to take your narrowboat holiday with us at Floating Holidays. As a small family run business we appreciate that you have a wide selection of boating operators to choose from and are very grateful that you have chosen to stay on one of our boats.

We hope that you have a fabulous time during your holiday with us. Whether you are a first time narrowboater or a seasoned hand, all boats are different and during the handover we will have given you a briefing of the boat systems, procedures and how to navigate the canals.

There is a lot of information to take in during the handover, and this manual is intended as a reference guide for you during your stay should you wish to check on any particular item.

If you cannot find the answers to your question within these pages then please do not suffer in silence! Just give us a ring on 0330 043 0547 and we will do all we can to help either remotely or in person.

Prior to you boarding your boat, the vessel has been rigorously checked to ensure it is fully serviceable and replenished, to hopefully ensure that you can enjoy your holiday without the need for unscheduled stops or interruptions. You will need to top up the water tank during your stay as detailed during your handover.

Should you need to contact us during your stay you can reach us via the following methods:

**Daytime Telephone: 0330 043 0547**

**Email: [info@floating-holidays.co.uk](mailto:info@floating-holidays.co.uk)**

**Emergency Telephone: 07901 588 364**

**You must return your boat to us between 0900 and 0930hrs in the morning on your departure day, failure to do so has an adverse effect on the next guests and shall result in a late fee of £50 per 30 mins late when returning, unless agreed with us in writing before hand.**

## Boat Specification:

### Boat Details

<b>Name</b>	<b>Golden Princess</b>
<b>Index</b>	<b>528909</b>
<b>Hull Maker</b>	<b>Aintree Boats</b>
<b>Hull Style</b>	<b>Cruiser Stern</b>
<b>Category Classification</b>	<b>D</b>
<b>Length</b>	<b>17.37 metres // 57 feet</b>
<b>Beam</b>	<b>2.08 metres // 6 feet 9 inches</b>
<b>Draft</b>	<b>0.53 metre // 1 foot 9 inches</b>
<b>Air Draft (Minimum Height Clearance)</b>	<b>1.6 metres // 5 feet 3 inches</b>
<b>Weight</b>	<b>15,000 kgs</b>
<b>Designed Max Load</b>	<b>750 kgs</b>
<b>Max Persons Aboard For Cruising</b>	<b>8</b>
<b>Max Persons Aboard Overnight Stays</b>	<b>6</b>

### Systems

<b>Engine</b>	<b>Canal Line 38</b>	<b>Kioti</b>
<b>Gear Box</b>	<b>PRM</b>	<b>150</b>
<b>Stern Gear</b>	<b>Prop Shaft</b>	<b>Trad Stern Gland</b>
<b>Propeller / Shaft</b>	<b>16 inches x 19 inches RH</b>	<b>1 inch Stainless Steel</b>
<b>Stern Tube Packing</b>	<b>1 inch x ¼ inch packing</b>	
<b>Diesel Fuel Capacity</b>	<b>180 litres</b>	
<b>Fresh Water Capacity</b>	<b>600 litres</b>	<b>Stainless Steel Tank</b>
<b>Black Tank Capacity</b>	<b>150 litre tank</b>	
<b>LPG Capacity</b>	<b>2 Cylinders</b>	<b>Locker at Stern</b>
<b>Inverter</b>	<b>Sterling</b>	<b>2500 watts max combined</b>
<b>Heating</b>	<b>Webasto 5kw</b>	<b>Diesel</b>
<b>Cooker</b>	<b>Thetford Midi Prima</b>	
<b>Hob</b>	<b>Thetford</b>	
<b>Toilet</b>	<b>Sealand Traveler</b>	<b>511</b>
<b>Fridge</b>	<b>12 volt DC</b>	<b>Shoreline / Inlander style</b>
<b>Shower &amp; Hot Water</b>	<b>Calorifier</b>	<b>Warmed by engine or heating</b>
<b>Water Pump</b>	<b>Jabsco Par Max 2.9</b>	<b>Under Bow Cabin Bed</b>
<b>Shower Pump</b>	<b>Whale Gulper</b>	<b>Panel to side of shower</b>
<b>Bilge Pump</b>	<b>Rule Mate x 2</b>	<b>500lpm</b>
<b>Starter Battery</b>	<b>1 Leoch SFL 130DT</b>	
<b>Domestic Batteries</b>	<b>4 x Leoch SFL 130DT</b>	
<b>Alternators</b>	<b>55amp 12v starter</b>	<b>75amp 12v domestic</b>

## Boat layout

This is the internal layout of your boat. Other terms you may hear referred to are:

**Stern:** the back of the boat

**Helm:** driving position

**Starboard:** right side of boat when looking from back to front


**Port:** left side of boat when looking from back to front

**Bow:** the front of the boat

**Gunwales ("Gunnels"):** the side of the boat where there is a small shelf

**Tiller:** the handle attached to the rudder used for steering

**Morse:** throttle

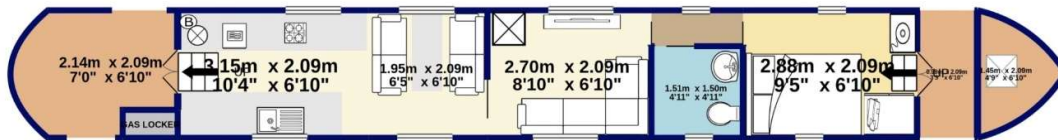

## Basic boat operations

### Starting & stopping the engine

Insert the ignition key into the control panel turn clock wise one click to “1” position.

Turn to next position (which is spring loaded) and hold the key here at “HEAT” for 5 seconds.

Turn clock wise once more to “START” and hold until the engine fires up. When you release the key from this position the key should return to the “run” position and must remain in this position whilst the engine is running.

To turn the engine off then with the key in the “1” position, turn the key back to the starting position “0” and the engine will stop running. You may now remove the key from the panel.




### Morse , tiller & tiller arc

The morse is the throttle and gear control lever at the helm position. Moving the morse forwards will engage forward gear and increase the engine speed. Moving the morse backwards will engage reverse gear and increase the engine speed. Should you wish to move from forward to reverse gears you must pause in between for 3 to 5 seconds to allow the moving parts to stop moving in the opposite direction before adding in the opposite input into the morse control.

The tiller is the arm that is attached to the rudder and is used for steering the vessel. You must be in forward gear to get best steering control effects. Where you point the tiller arm is where the stern of the boat will head towards. The bow of the boat will generally move in the opposite direction as the boat pivots around the centre of the vessel.

The tiller moves in an arc and it is important to stay out of the tiller swing when underway, else if the rudder hits an underwater object the tiller arm can swing with force into persons standing in the way causing potential injury.



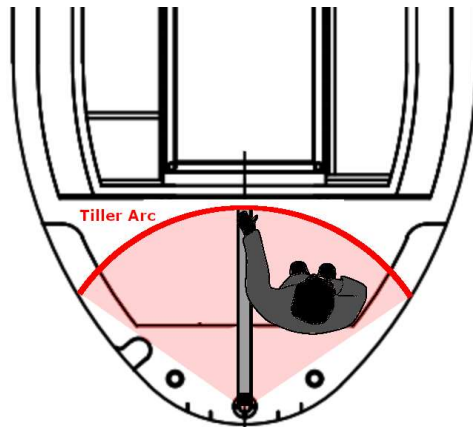

## Heating domestic water

The hot water is generated on board the boat by running either the central heating system or the engine. After around 30 minutes there will be adequate hot water for domestic functions.

## Central Heating

### Webasto 5kw Diesel Heater

The heating for this boat is a diesel 5kw heating system which requires diesel from the main fuel tank on board to heat the radiator fluid and power from the batteries to work the pump to circulate the heated radiator fluid around the vessel.

At the stern entrance of the boat you will find this switch:



This turns the heating on and off. When the heating is on the green light will illuminate. Any flashing of the green light indicates a fault. Please contact us if this occurs for further directions and assistance.

## Cooker & hob

The cooker, grill and hob are powered by LPG Gas. To light press the relevant knob down and turn to the desired setting. Whilst holding the knob down light with the long lighter provided (should your long lighter run out of gas, these are refillable with butane alternatively there will occasionally be some matches in the cutlery drawer). Hold the knob down for 5 seconds before releasing so that the unit can register that the flame is active.

## Microwave

The microwave is a power hungry appliance and should be used for short runs with the engine running to replenish the battery bank.

## 12v power circuit

The majority of the boat systems where possible are run directly from the batteries on a 12 volt power supply (water pumps, lights, TV etc). There is a circuit breaker board with resettable fuses in the cupboard above the TV in the lounge. This is also the easiest way to turn off specific systems easily in one central location should you need to do so. E.g. if you run out of water to turn the water pump off.

## 240v Mains power circuit

The 240v “mains power” is provided by an inverter which transforms the 12 volt batteries on board into 240v power at the sockets.

The inverter on board this boat is **2500Watts MAX**. Should you try to run appliances which individually or combined exceed this amount of power draw, then the inverter will either trip out or other boat electrical systems can be damaged causing faults that will become a problem for your holiday, potentially requiring an engineers call out to fix.

If you are just charging phones, tablets and laptops this shouldn't prove an issue.

The most likely appliances that could cause problems with the inverter and electrical systems are high powered appliances, these usually have a heating element of sorts such as hair dryers, coffee machines, straighteners etc. If you are unsure then check the power draw on the appliance label.

Should the inverter drain the batteries or trip out then turn the black button in to the central position which is “off” then run the engine for an hour before turning the button to the “up” position which is “on”. You should then have 1 green light illuminated which indicates the system is operating correctly.

## Refilling with water

To refill the water on board the boat you will need to pull up and moor at a water point. The filling cap on the boat is located on the front deck floor and there is a hose in the bow locker.

You will need to remember that you need to fill up until the tank is full. The water comes out of the internal taps as quickly as the tap you fill the tank with. So if you stop on a water point for 5 minutes, then do not expect a 20 minute shower!

## Shower

Before taking a shower you will need to turn on the “gulper pump” to eject the water from the boat as you are showering. The button is around waist height to the left of

the shower door. **THIS MUST BE TURNED ON BEFORE SHOWERING OR YOU WILL FLOOD THE BOAT WITH THE SHOWER WATER.**

## Toilet

The toilet on the boat is a drop through pump out. These toilets should not smell when operating correctly. Should you have any issues please bring this to our attention promptly.

To operate the flush of the toilet you need to depress the foot pedal until the material enters into the tank.

Each toilet has an isolation switch for the flushing water. Should you find the foot pedal is jammed or stuck in the open position then please close the isolation valve and call us for assistance.

**REMEMBER THE RULE OF THE 4 "P'S OF WHAT IS PERMITTED TO BE FLUSHED INTO THE TOILET.**

**ONLY: PEE, POO, PAPER & PUKE!**

## Running out of LPG gas

Turn off the empty cylinder (lightest one) and turn on spare full cylinder (heavy one) using the brass coloured valve dial on the top of the cylinder.

## Ventilation

For your comfort and safety ventilation is very important and the boat has been designed with this in mind. Please do not cover any roof, door or other ventilation as this can cause a dangerous environment for persons inside the boat and will also cause a build up of condensation which can cause the occupants to feel cold and damage the internal wood work of the vessel.

Consider opening the window hoppers to permit additional fresh air to flow throughout the boat.

## Daily maintenance checks / tasks

At the end of each day you will need to pump out the engine bilge. To do this press the "bilge pump" button next to the engine panel until the water has stopped coming out the boat at the side towards the rear.

**IT IS THE SKIPPERS RESPONSIBILITY TO MONITOR AND MANAGE WATER INGRESS AT THE STERN GLAND. IF THERE IS ANY CAUSE FOR CONCERN THEN YOU MUST CONTACT US IMMEDIATELY.**

The boat has been thoroughly checked prior to your arrival. Any daily checks that you are required to complete will be detailed in your handover. For further assistance

please get in touch with us. Please **DO NOT ATTEMPT ENGINE OR OTHER MAINTENANCE WHILST ON THE BOAT WITHOUT CONSULTING WITH US FIRST.**

## Troubleshooting tips

### Is the toilet tank full?

The toilet should be adequate for 1 to 2 weeks of normal use for the compliment of your crew. Should you feel think that the toilet is full then it is often a “poo pyramid” below the drop of the drop through. The easiest way to solve this is to hold the pedal down with a foot and jiggle either a mooring peg or sticky thing into the opening to clear any blockage. If you still have an issue then it will require pumping out.

### The water pump keeps making a noise!

You have likely ran out of water - in which case turn the “water pump” off at the 12volt fuse board above the TV in the cupboard to avoid burning out the pump. Refill the tank with water and then turn on the pump again. After refilling and turning the pump on you will need to run water through the taps to purge any air in the system, this includes all sinks, showers and the toilet flush.

If you still have water from the system then it is likely that you have a slightly open tap or shower somewhere in the boat which is dripping in to the bowl, drain and then the water pump is periodically repressuring the system.

### No central heating

The most common causes of this issue are either low gas / diesel (depending on fuel source of central heating - see above) or low batteries. Run the engine and check fuel supply level. Should problems persist then get in touch with us for further help.

### The engine has stalled / the boat won't move

See the section below titled “propellor fouled” - for further help please get in touch with us.

## Boating Rules

Please read thoroughly the boaters handbook (included at the appendix of this manual) and or watch the boaters handbook video ([www.floating-holidays.co.uk/boaters-handbook/](http://www.floating-holidays.co.uk/boaters-handbook/)) , but be extra focused on the following pointers.

- No cruising after dark (dawn to dusk only).
- Max Speed - 4 mph i.e. a brisk walking pace.
- When passing other moored boats do so at minimum speed (the slowest speed possible) and slow down in advance of moored boats.
- Stay clear of the cill or other obstacles when using locks.
- Do not create a breaking wake.

- Do not moor at a lock or bridge landing, winding hole (turning point), water point or other “facility” unless needed or for any longer than needed to use that facility.
- Follow signs and instructions regards mooring restrictions or other matters.
- Leave no rubbish behind and pick up after pets.
- Skipper and First Mate must be sober when operating the vessel (cruising).
- Be courteous and polite to other users of the waterways.
- Follow all instructions of our staff and the navigation authority.

Failure to follow or multiple breaches of these rules or standards of safe navigation may result in the termination of your holiday and additional costs to you for the recovery of the vessel.

## Emergencies & safety equipment

### Safety equipment

Your boat is equipped with:

1 x lifebuoy ring

3 x dry powder fire extinguishers

1 x fire blanket

1 x basic first aid kit

1 x smoke alarm

1 x carbon monoxide alarm

Life jackets as required / requested (mandatory 1 for each child or non-swimmer)

Equipment	Location	Operation
Life Buoy	Stern of boat on roof	Throw to casualty
Buoyancy Aids / Life Jackets	As issued during handover	Either auto deploys, or pull red handle to inflate
Boat Pole & Bill Hook	On roof	As required with care. Boat pole can be used to “punt” boat if grounded or to turn for example
Fire Extinguisher	Saloon, galley & fore cabin	Remove pin, aim at base of fire, squeeze handle, release to stop
Fire Blanket	Galley	Pull tabs to remove from holder and place over fire to smother flames.

First Aid Kit	Kitchen cupboard	As required - please let us know if you have used any items so that we may replace them
This Boat Manual	In your hand - you are reading it!	Turn the pages and look at with your eye holes, and digest with your squidgy brain.

## Shut off valves and isolation switches

In some instances it maybe desirable to shut down boat systems in a controlled way to isolate a particular issue. These are the main shut off valves and isolation switches, their locations and operations:

Service	Location	Operation
Batteries	Under the stern deck boards on starboard and port sides	Lift deck boards and rotate red handle switches / key to off and remove keys
Fuel	Under stern deck boards on starboard rear hull wall	Rotate handle 90 degrees so that it is at right angles with the supply pipeline
Engine	STOP turn the key back to "0" position.	Push button
Water	12v water pump or wheel valve under bed	Switch pump off or turn red wheel valve under bow cabin bed fully clockwise
240v "mains" power	RCD Breaker in at steps to rear of boat	Switch to off position
LPG Gas	Emergency control valve (ECV) after regulator or wheel valve on each cylinder	Turn ECV 90degrees or close wheel valve on any open cylinders clockwise to the closed position (fully)

## Emergency procedures

It is very unlikely that you will encounter an emergency during your stay, however should you do so it is important to know how to handle the matter. The below may give you some guidance on what to do in particular circumstances. This list is by no means exhaustive and safety is always paramount. Please ensure that you approach any situation calmly with due thought given to the affects that any action may have to potentially make a situation worse. Prevention is often better than cure, which is why during your briefing we will have stressed certain matters to bring your attention to them (for example not permitting ropes to drag in the water in case they entangle the

propeller or to leave trip hazards on the deck to avoid trips resulting in a man overboard situation).

### Man Overboard

If someone should fall in the water:

#### DO:

- ✓ Raise the alarm by shouting “MAN OVERBOARD”.
- ✓ Ensure the boat is not in gear - return the throttle to the 12 o'clock position or “neutral”. The biggest danger to someone in the water is being badly hurt by a fast spinning propeller or dragged to the propeller by the water that it is moving!
- ✓ Throw the life buoy to the casualty
- ✓ Stop the boat and moor up securely
- ✓ Throw lines or use poles to aid recovery of casualty
- ✓ Once recovered have the casualty take a shower and change clothes immediately to reduce risk of deadly waterborne infectious diseases
- ✓ Administer first aid as necessary

#### DO NOT:

- × Enter the water yourself to recover casualty
- × Drive rear / stern of boat towards casualty - you will seriously hurt them with the propeller
- × Allow casualty to be un-monitored or alone for at least 2 hours after the incident
- × Permit the casualty to drink alcohol

### LPG Gas Escape

If you suspect that there is an LPG gas leak aboard the boat:

#### DO:

- ✓ Isolate the gas supply at the Emergency Control Valve or Cylinder Valve.
- ✓ Turn off the engine, cooker, hob, grill, heating or any appliance which has a pilot light.
- ✓ Moor up, open all windows & doors, then ensure all crew disembark the boat.
- ✓ Call our emergency number for further assistance only once you are off the boat and clear of the hazard.

#### DO NOT:

- × Use any gas or electrical appliance.
- × Use any electrical switch (even to turn it to the off position).
- × Smoke or light any flame.

- × Use a mobile phone whilst in, on or next to the boat.
- × Attempt to fix or repair the issue yourself.

These procedures can in the main be equally applied to a carbon monoxide alarm being set off, ventilate the boat and evacuate the boat, then call us for further assistance.

### Lock Emergency

Some of the below items can be taken as good practice for general lock operation. Please ensure you read the boaters handbook sections of this guide with regards to how to operate a lock properly and avoid an issue. However if you do become stuck or cilled then:

#### **DO:**

- ✓ In the event of an emergency **IMMEDIATLEY CLOSE ALL LOCK PADDLES**
- ✓ Assess the situation and what has gone wrong. Attempt to carefully reverse the scenario to refloat the boat.
- ✓ Always ensure that there is crew at the lock paddles being operated as well as at the helm position at all times during the locking process.
- ✓ Have children and pets under control at all times.
- ✓ Always pay attention when locking, do not be distracted, e.g. being engrossed in a phone call rather than paying attention to what is happening.
- ✓ Be in control at all times.
- ✓ Operate paddles slowly and with care to ensure you are always in control of the boat in the lock.
- ✓ Ensure that all crew are accounted for and are unharmed.
- ✓ Report all issues with locking to us when it is safe to do so straight away, in order that we can check the vessel is still sound and safe to operate as well as to enable us to assist you where possible.

#### **DO NOT:**

- × Enter the lock in person or put yourself or the crew at risk.
- × Try and pull or push the boat in the lock manually if it is stuck.
- × Allow passers by or other boaters to make decisions about how to proceed with solving the problem if you do not agree or are not sure about things. You are responsible for your crew and vessel.

### Propeller Fouled

The most common items to get fouled in the propeller are debris or rubbish in the canal, or your own mooring line. Best practice for prevention of these are to go slowly as using more throttle drags the back of the boat deeper in the water and therefore more likely to pick up debris. Also good management of your mooring lines and ensuring they cannot fall in the water or near the propeller to start with will avoid these issues. If you do end up with a fouled propeller though you should:



**DO:**

- ✓ Moor up safely and turn off the engine and remove the key.
- ✓ Remove the clamp and lid from the weedhatch located under the stern deck boards at the rear most part of the boat.
- ✓ Untangle / remove any debris, rubbish or ropes from the propeller, ensuring to be careful of any sharp items such as chicken wire or fishing hooks.
- ✓ Fully and firmly replace the lid and ensure the clamp is secured fully.
- ✓ Start the engine and whilst moored test that the boat goes into forward and reverse gear.
- ✓ Whilst in reverse gear, make observations of the weed hatch in order to look for any water ingress through the lid seal.
- ✓ If any water comes in through the lid seal, then reseal and reclamp and repeat the observation test in reverse.
- ✓ If water continues to come in through the lid seal **DO NOT** drive the boat, call us immediately for further assistance and instructions.
- ✓ If the observation test shows no water ingress continue on your cruise.

**DO NOT:**

- × Try and clear the propeller by entering the water.
- × Try and clear the propeller whilst the engine is running.
- × Drive the boat whilst water is coming in through the weed hatch lid.

## Incident & Accident Reporting

In the unlikely and unfortunate event of you experiencing a boating accident or incident it must be reported to us promptly in order to enable us to comply with legal & insurers requirements of recording reporting incidents in a timely manner to the relevant authority or insurer within 24 hours of an incident occurring.

This is especially important in cases that involve a fatality, injury requiring hospitalization, serious damage to ours or any other vessel or any incident involving other craft or members of the public.

The hirer and skipper are responsible for the vessel's safe navigation and return, as well as the safety of their crew. In the event of any incident or damage to the boat, other craft, waterway property or any injury the hirer and skipper must ensure that:

- They obtain a full record of the names, registration numbers of craft and addresses of all persons or vessels involved.
- Notify us by telephone immediately with the full details of the accident or incident and the damage or injuries that have occurred.
- Record full information about the incident, what happened where, when and with who.

- Take photographs or draw a diagram to aid memory or substantiate a particular narrative.
- Under no circumstances admit fault or liability to any person.
- Not carry out or have carried out by others any repairs to the boat without the consent of the company.
- Obtain and follow all company instructions.
- Should the hire end for whatever reason due to an incident the company will owe no liability to the hirer due to an early termination.

The hirer and skipper remain responsible in full for any acts of negligence or deliberate damage to the vessel. The vessel is under the company's fleet policy and the hirer shall be liable for the excess as notified in the hire agreement from time to time. In the event that the company's insurance cover is prejudiced or invalidated by any failure of the hirer or skipper to comply with the provisions of this section the hirer and or skipper shall indemnify the company in respect of all liability arising via claims, loss, damage or other expenses incurred. An accident / incident reporting form is included in the appendix of this manual.

## Damage, Breakdown or Repair

We expect you to take reasonable care of the boat, its equipment and contents, and shall return them at the end of the holiday in accordance with the company's instructions and in a clean and tidy condition. Should you experience an issue whilst on your holiday we are always on hand to offer assistance. In all events however the hirer shall;

- Carry out the daily maintenance tasks, as instructed at the start of the holiday during the handover induction.
- Notify the company in the event of any breakdown, damage, theft or loss and shall provide full details in order to comply with the company's instructions
- Must not undertake or have undertaken any repairs, adjustment or service without the company's prior written approval. Any repairs or replacements by the hirer without the company's approval shall not be accepted and in all circumstances shall not be reimbursed.
- Be responsible for getting the boat off of mud banks or other grounding and for removal of weeds, rope or other matter from propellers.
- Notify the company if any of these operations cannot be carried out without risk of accident or damage.
- Have no claim on the company as a result of breakdown or failures of the boat and its equipment, or for any delays caused by repairs to the boat.
- Comply with the company's instructions at all times; otherwise the hirer shall be liable for any and all loss or damage incurred.

## Appendix

# Landlord Gas Safety Certificate

**safe**  
591109



## Liquified Petroleum Gas Appliance Safety Record

Installation Record of Works carried out in accordance with the Gas Safe (Installation and Use) Regulations and the Gas Industry Unsafe Situations Procedure. No Detailed internal inspection of flues (integrity, construction and lining) has been carried out.

Certificate Reference  
**B-FLP-ACE01212**  
**IWA02-23/006**

**safe**  
591109

### Engineers Details

Name: **Stephen J Williams**  
 Address: **IWABSS Limited, NB Melody, Midway Marina, Wardle lane, Nantwich**  
 Gas Safe Reg. No: **591109**      Email:  
 Telephone No: **07814-530679**      [Steve@iwabsslimited.co.uk](mailto:Steve@iwabsslimited.co.uk)

### Installation Details

Installation: **NB Golden Princess**  
 Address: **Floating-Holidays, Floating-Holidays, Middlewich Top Wharf, Canal Terrace, Middlewich, Cheshire.**  
 Telephone No: \_\_\_\_\_


### Client Details

Client Name: **Mr Paul Donelly,**  
 Address: **Floating-Holidays, Middlewich Top Wharf, Canal Terrace, Middlewich, Cheshire.**  
 Telephone No: \_\_\_\_\_

Appliance Details				Inspection Details															
Location	Appliance Type	Make	Model	CO2 Reading	CO Reading	Flue Type (OF/SLUF)	Appliance Inspected (Y/N/A)	Combustion Analysis Reading	Operating Pressure (mBar)	Landlord Appliance (Y/N/A)	Heat Input (kW)	Safety Devices Correct Operation	Ventilation Provision	Satisfactory (Y/N/A)	Flue and Termination Condition or via (Y/N/A)	Flue and Termination Satisfactory	Flue Performance Test	Appliance Serviced (Y/N/A)	Appliance Safe To Use
1	Galley	Cooker	Thetford	931	N/A	N/A	UF	Y	N/A	37	Yes	5.8	Y	Y	N/A	N/A	N/A	No	Y
2	Galley	Cooker	Thetford	Midi prima III	N/A	N/A	UF	Y	N/A	37	Yes	3.8	Y	Y	N/A	N/A	N/A	No	Y
3																			
4																			
5																			
<b>Faults / Notes</b>				<b>Remedial Work Taken</b>														<b>Warnings</b>	
1																			
2																			
3																			
4																			
5																			
6																			

System Air Test	No	System Air Test Pressure	N/A	mBar
Gas Tightness Test	Yes	Reg Lock Up Pressure	36	mBar
Installed to 10239	Yes	Reg Operating Pressure	38	mBar
Appliances to Manuf Inst?	Yes	Hose(s) Check	Ok	
Smoke / CO Alarm?	Yes	ECV Check	N/A	

Signatures

Report Issued by	Name: <b>Stephen Williams</b>	Signed		Date	<b>12 Feb 2022</b>
Report Received By	Name: _____	Signed	_____	Date	_____

# Navigation Authority License



**Golden Princess**

**528909**

**04/24**

Holiday Hire Business Canal and River Licence



**Golden Princess**

**528909**

**04/24**

Holiday Hire Business Canal and River Licence

# Vessel Insurance

CONFIDENTIAL

geo/  
SPECIALTY

## Summary of Operative Liability Covers

Name of Insured	Floating Projects Ltd t/as Floating Holidays and Middlewich Wharf
Address of Insured	Canal Wharf Middlewich CW10 9BD
Policy Number	MT03648
Period of Insurance	From 12/04/2023 to 11/04/2024
Date of Issue	13/04/2023

The sections shown below are operative under this policy with the Limit not exceeding the value stated (any one claim or any period in respect of Products Liability)

<u>SECTION</u>	<u>LIMIT OF INDEMNITY</u>
Employers Liability	£10,000,000
Public & Products Liability	£10,000,000
Heat Work Away	NOT INSURED
Exports to North America/Canada	NOT INSURED
Ship Repairers Liability	NOT INSURED
Excess Layer Liability	NOT INSURED

This is a summary of cover only and does not form part of the insurance documentation or contract we have issued. Refer to the Policy Schedule and Policy Wording for full details

Administered by: Marine & Leisure @ Geo Specialty. Marine & Leisure @ Geo Specialty, a trading name of Geo Underwriting Services Limited, are the administrators of Your Policy on behalf of Your Insurers. Geo Underwriting Services Limited are authorised & regulated by the Financial Conduct Authority, No: 308400. Registered in England & Wales, No: 4070987.  
Registered Office: 2 Mincing Lane, London, EC3R 7PD.

GEOMT SOC 10 2020



# Accident / Incident Reporting Form.



# Boaters Handbook